



Wireless Portable Speaker

USER GUIDE

MODEL : LPS-M300



Please carefully read this Manual before using this Product for the very first time and well keep it for further reference.

FEATURES:

1. 1.1CH outdoor Passive Wireless Speaker;
2. Output very clear sound and heavy bass, dynamic sound effect;
3. 10 meters operating range(without obstacles);
4. Secure simple pairing for user-friendly operating;
5. With Wireless version 5.0, wireless stream music from any BT -enabled device such as your mobile phone, notebook, iPhone or iPad ;
6. Supporting USB and FM radio;
7. With Karaoke function, 1 microphone input;
8. With Line-in function(AUX-IN), suitable for PC, MID, TV and other audio device;
9. With TWS function, one Wireless of mobile phone can connect two same Speaker at the same time, enjoy the stereo effect;
10. Built-in lithium rechargeable battery 1800mAh;
11. With handle, easy to take out.


Specifications

1. Wireless version: 5.0; Support A2DP and AVRCP profile
2. Wireless range: up to 10 meters(without obstacles)
3. Speaker: Tweeter Size: 2 inch; Tweeter Output: 1W, 4Ω
Subwoofer Size: 4 inch; Subwoofer Output: 25W, 4Ω
4. Connections: USB; Aux-in 3.5mm jack connection
5. Power supply: Built-in rechargeable lithium battery 1800mAh
(2 hours playtime with max volume)
6. Recharge power: DC 5V 1A (USB-to-micro USB charging cable included)
7. Product size: 352(L)*134(W)*180(H)MM
8. Frequency response: 80-15KHZ

Accessories:

Charge cable, Audio cable, User manual.

INSTRUCTION FOR APPEARANCE AND KEY:

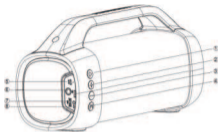

1. Play/Pause(Short press)/ OFF/ON button(Long press)
2. Forward(Short press)/ Volume up(Long press)
3. Backward(Short press)/ Volume down(Long press)
4. Mode (Switch Wireless, USB ,FM and AUX-IN)
/TWS(Long press)
5. Charging Port
6. Wired microphone input
7. USB Port

Wireless:

1. Long press“Play/Pause” button, the LED light on the “M” button turn blue and twinkle quickly and “di” twice.
2. Activate Wireless of mobile phone and search for device name “LPS-M300” then connect it. The blue LED light on the “M” button twinkle slowly and “di”three times connected successful.
3. Play the music from your mobile phone and enjoy.
4. Short press “Forward” or “Backward” button on the devices or on Mobile phones to select songs you like.
5. Short press“Play/Pause” button on the devices or on Mobile phones to play/stop the music.
6. Long press “Forward” or “Backward”button to adjust volume up and down. Or adjust the mobile phones’ volume.

TWS Function:

1. Turn on the two identical speakers you want to be paired, please noted they must be the same BT pairing name, both under BT mode. (Only need to set up one of the two Speakers)
2. Long press "M" button for around 4 seconds once, "di" once indicate that two Speakers go to connecting; "di" three times indicate that two Speakers have been connected; "di" twice indicate that the two Speakers are disconnected.
3. Under TWS function playing mode, long press the "M" button for around 3 seconds once, "di" once indicate that two Speakers are going to disconnecting; "di" twice indicate that the two Speakers have been disconnected.
4. Using Audio Cable or an external device's Wireless connect one of two Speakers which already Wireless paired, then music plays, one is in left channel while the rest one in right channel.
5. Under Wireless playing mode or AUX playing mode, long press the "M" button to use TWS function. AUX playing mode is preferred (When inserting Audio Cable, it is AUX playing mode). After unplugging Audio Cable, it is Wireless playing mode.
6. Under USB playing mode or FM radio mode, it can't use

AUX-IN:

1. For other compatible music devices or your MP3/MP4 players, use the supplied audio line cable to connect from the device's "Line Out" to the "Aux In" of this device. Then press the "M" button to switch to AUX-IN state.
2. When using an external device, all functions will be controlled by the external device except the "Play/Pause" button.
3. Long press "+" or "-" button to adjust volume up and down. Or adjust the mobile phones' volume.
4. Under AUX playing mode, long press the "M" button to connected two same Speakers, then it can use TWS function.

Remark: Short press "M" button to switch to the next mode, long press "M" button connected TWS or disconnected TWS.

Playing music from USB disk:

1. Long press "Play/Pause" button, the LED light on the "M" button turn blue and twinkle quickly and "di" twice.
2. Insert USB flash disk into slot, the music stored will be played automatically and the blue LED light on the "M" button always keep lighting.
3. Under playing mode, short press "Forward" or "Backward" button to select songs you like, long press to fast forward or backward the song.
4. Short press "PLAY/PAUSE" to play or pause.
5. Please Long press "Play/Pause" button to turn off Speaker while without use.

Remark: Under Wireless playing mode, insert USB will disconnect the Wireless and switch the playing from USB.

FM Radio:

1. Long press "Play/Pause" button, the LED light on the "M" button turn blue and twinkle quickly and "di" twice.
2. Short press the "M" button to switch to FM radio state.
3. Under playing mode, short press "Play/Pause" button to auto search the FM Channel and store it automatically.
4. Short Press "Forward" or "Backward" button to change the stored FM channel.

How to charge:

1. The charger is not included in the accessories. Please use the Universal 5V/1A charger to charge this device, and we are no responsible for any damage caused by using other charger.
2. Power off the unit, put the provided charge cable into the charge slot of unit, connect the other end to PC or other charger with DC 5V output (Not included),the red charging indicator keep lighting.(When playing music during charging, please put the volume to middle, because for some music with heavy bass, the charger may not be able to afford the high current temporarily under the maximum volume)
3. Charge time should be about 3.5 hours. (When charging full, the indicator light will switch OFF)
4. In order to prolong the life of battery, please do not charge more than 8 hours.



İthalatçı Firma

ENES TURKMEN VE ORTAGI - HOCAPASA VERGI DAİRESİ VERGİ NO: 9240489355
PROF.CEMİL BİRSEL CD NO:29/1 SULEYMANIYE MAH EMINONU/İSTANBUL / TEL: 0850 340 88 88

İmalatçı Firma

LINK-TECH TRADING COMPANY LIMITED - FLAT 609A, 6/F.,FOOK CHEONG BUILDING 63 HOI YUEN -
ROAD,KWUN TONG ,KOWLOON, HONG KONG / TEL: 31147567